

WHITE SCRIM

50MM - 100MM



THE PLASTERERS EVERYDAY SCRIM

ELIMINATES THE NEED FOR PRE-PLASTERING



HIGH STRENGTH



DURABLE



FINE MESH


YOUR NEAREST MERCHANT:

WALTHER STRONG®

1 - Prepare Surface
[remove all debris & dust]



3 - Press Firmly
[apply firm pressure along tape]

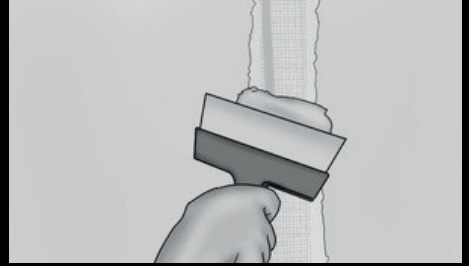

2 - Apply Tape
[apply along centre of joint]

4 - Apply Joint Compound
[ASAP after applying tape]



50MMX90M
TP-SCRIM50X90PR



75MMX90M
TP-SCRIM75X90PR



100MMX90M
TP-SCRIM100X90PR

- Prevents cracks
- High strength adhesive
- Heavy duty scrim
- Alkali resistant
- Fineline mesh
- Tested in both hot & cold environments

YOUR NEAREST MERCHANT: